


Scope: <b>EXcite</b> USER BCP 150 / BPB 150		MANUAL		<b>BARTEC TECHNOR</b>	
Date: 24.11.2014	Rev.: A	Checked by: T.H.	Approved by: EGT	Page: Page 1 of 6	Document no.: 55-DSP-5

## TECHNICAL MANUAL

### EXPLOSION PROOF MANUAL CALL POINT / PUSH BUTTON

#### BCP 150 / BPB 150

ATEX Marking:  II 2GD




Code: EPL Gb, Db

Ex d IIC T6 IP66

Ex tb IIIC T85°C



Marking details:

			
 0470	 II 2 GD	Presafe 14ATEX 5391X IECEX PRE 14.0050X	
Ex d IIC T6 Gb	IP66		
Ex tb IIIC T85°C			
T.amb; -40°C < Ta < +70°C			
		U	<input type="checkbox"/> VDC <input type="checkbox"/> AC 50/60Hz
Serial NO.:			
WARNING - DO NOT OPEN WHEN AN EXPLOSIVE ATMOSPHERE IS PRESENT			
<b>BARTEC TECHNOR</b>			
STAVANGER NORWAY			

Please note that every care has been taken to ensure the accuracy of our technical manual. We do not, however, accept responsibility for damage, loss or expense resulting from any error or omission. We reserve the right to make alterations in line with technical advances and industry standards.

Scope: <b>EXcite</b> USER BCP 150 / BPB 150		MANUAL		<b>BARTEC</b> <b>TECHNOR</b>	
Date: 24.11.2014	Rev.: A	Checked by: T.H.	Approved by: EGT	Page: Page 2 of 6	Document no.: 55-DSP-5

## 1.0 INTRODUCTION

BCP/BPB-150 series Explosion-proof Manual Call Point / Push Button is designed for use and installation in Zone 1 and Zone 2 areas with gases groups of IIA, IIB, IIC and temperature classification of T6. It specially applies to Oil & Gas, Offshore Platform, Chemical, Petrochemical, Refinery and Marine Industries etc. Enclosure material is UV and corrosion resistance GRP (Glass Reinforced Polyester). The design of two LED indicators (Green and/or Red) is unique. It is compatible with PLC, DCS and ESD system via 4-20 mA output. It is ideal to be used as an explosion-proof Manual Call Point for Fire Alarm System with Addressable Module fixed.

There are four different types of manual call point available –the one with the red LED, green LED, both red and green LED and none

Insert “√” before the one chosen by customer.

- With only red LED indicator**- During normal operation, the red LED will not be on unless the glass is broken by the operator when the device fault or alarm status arises.
- With only green LED indicator** – During normal operation, the green LED will be on unless the glass is broken by the operator when the device fault or alarm status arises.
- With both red and green LED indicator** - During normal operation, the Green LED is on. When device fault or alarm status arises, the Green LED will be cut off and Red LED will be on.
- No LED indicator

## 2.0 EXPLOSION-PROOF LABELING

All products have a rating label, which carries the following important information:

Product order no.: e.g.  
BCP150DLFABRD  
(Refer to the datasheet for product order selection)

Input voltage: <30 Vdc/ 6 amp or <250 Vac/ 11amp

Code: Ex d IIC T6 Gb  
Ex tb IIIC T85°C

T.amb -40°C to +70°C

ATEX Marking: Gas Group and Category: II 2GD

CE Mark:  **CE** 0470

Warning: DO NOT OPEN WHEN AN EXPLOSIVE GAS ATMOSPHERE IS PRESENT

Finish product serial no. (Include date of construction)

Note; exact information is given on the actual label, ref also example on page 1.

Scope: <b>EXcite</b> USER BCP 150 / BPB 150		MANUAL		<b>BARTEC TECHNOR</b>	
Date: 24.11.2014	Rev.: A	Checked by: T.H.	Approved by: EGT	Page: Page 3 of 6	Document no.: 55-DSP-5

### 3.0 TYPE APPROVAL STANDARD

The BCP/ BPB 150 series products have been approved according the following standards:

- IEC/ EN 60079-0    General requirements
- IEC/ EN 60079-1    Flameproof enclosure "d"
- IEC/ EN 60079-31    Dust atmosphere "t"

### 4.0 ZONES, GASGROUP, CATEGORY AND TEMPERATURE CLASSIFICATION

The BCP/ BPB 150 series products have been certified Ex d IIC T6. This means that the units can be installed in locations with the following conditions:

**Area Classification:**

**Zone 1:** Explosive gas air mixture likely to occur in normal operation.

**Zone 2:** Explosive gas air mixture not likely to occur, and if it does, it will only exist for a short time.

**Gas Groupings:**     Group IIA Propane  
                               Group IIB Ethylene  
                               Group IIC Hydrogen and Acetylene

**Equipment Category:** 2GD

**EPL:**                    Gb / Db

**Temperature Range:** -40°C <Ta < 70°C

### 5.0 INSTALLATION

**General Requirement**

Selection, Installation, Maintenance and repair of electrical apparatus for use in potentially explosive atmosphere should be done in accordance to IEC/ EN 6079-14/ -17/ -19. Product installation must be carried out in accordance with any local codes that may apply and should only be carried out by a competent electrical engineer

**Location**

The location of the unit should be made with due regard to the area where the unit is visible and can be easily operated. The unit should only be fixed to services that can carry the weight of the unit.

**Mounting**

The product should be mounted on a vertical surface using four (4) fixing holes in the base. The fixing holes are designed to fit M5 Allen Screw only. Use of stainless steel fastener is recommended by BARTEC TECHNOR. If you need mounting plate, please contact BARTEC TECHNOR to ask the installation drawing of the mounting plate. (See Fig 1)

Scope:

**EXcite**

USER

BCP 150 / BPB 150

MANUAL

**BARTEC TECHNOR**

Date:

24.11.2014

Rev.:

A

Checked by:

T.H.

Approved by:

EGT

Page:

Page 4 of 6

Document no.:

55-DSP-5

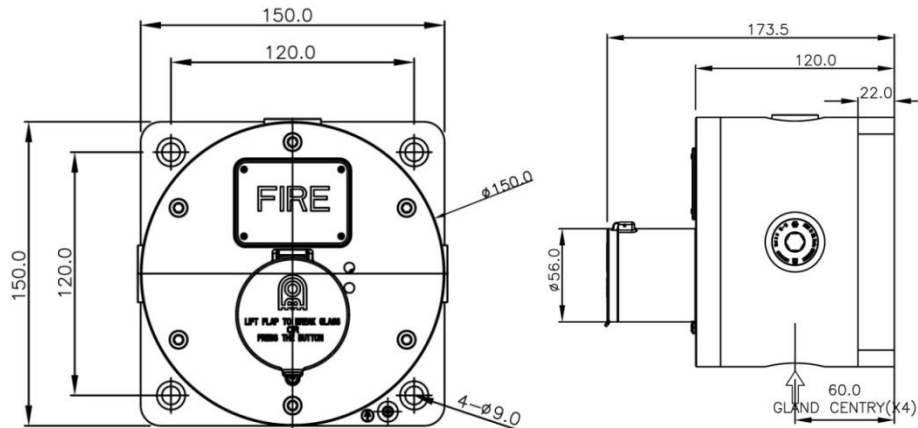


Fig. 1

## 6.0 WIRING

### General Requirement

BARTEC TECHNOR recommends that all cables and cores should be fully identified (suggest using cable from 2.0 to 2.5 mm<sup>2</sup>). Ensure that all nuts, bolts and screws are secured. Ensure that only the right and certified cable glands are used and earthed correctly. Ensure that only the right and certified stopping plugs are used to blank off unused gland entry points. In order to maintain the IP rating of the product, we recommend SS316L for this application.

### Cable Connection

The cable connection is connected with the 8-hole terminal blocks marked T1-T8 located in the product (See Fig 2). Cable connection should be carried out in accordance with relevant technical requirement.

### Remove End Cover

Unscrew the six (6) M5 retained hex socket head screws. This will release the cover from the base and allow the cover to hang on the retaining wire strap. Before replacing the cover, check that the flameproof joints are clean and not damaged, the gasket is still retained in its groove. (See Fig 2)

**CAUTION:** Before removing the cover, ensure the power to the product is isolated. Remove the four pieces of M5 socket screws to open the cover. Twist the cover gently clockwise and anti-clockwise, whilst pulling away from the base, until it comes off. Replace the cover in similar way, but operate in reverse manner as above.

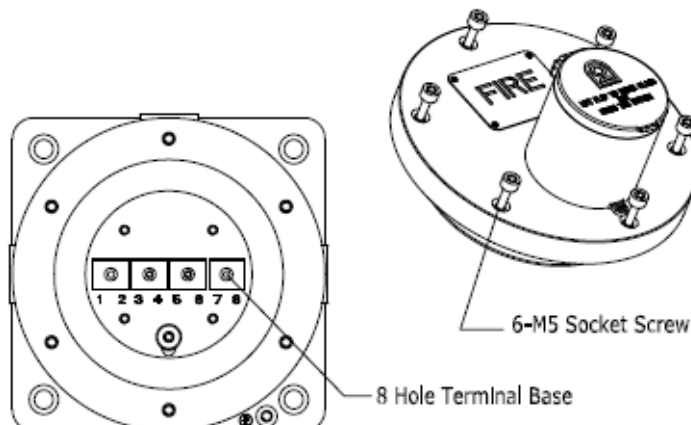


Fig. 2

Scope: <b>EXcite</b> USER BCP 150 / BPB 150		MANUAL		<b>BARTEC TECHNOR</b>	
Date: 24.11.2014	Rev.: A	Checked by: T.H.	Approved by: EGT	Page: Page 5 of 6	Document no.: 55-DSP-5

## 7.0 OPERATION

There are two types of Manual Call Point available-with/without flap. The product is operated by breaking of the glass using a hammer supplied by the manufacturer. For the one with the flap just lift it up first before breaking the glass. (See Fig 3)

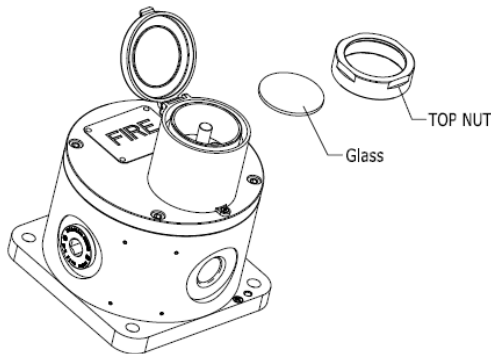


Fig. 3

### Replacement of Glass

To replace the glass after operation of the unit, unscrew the nut which fixes the glass. Take out the glass and remove any broken fragments from the unit. Check and make sure the gasket is in the nut. Place a new glass into the unit and replace the nut. (See Fig 3)

**CAUTION:** The glass and any broken fragments should be removed carefully by wearing protective gloves to avoid any injury.

## 8.0 CABLE GLAND

The BCP/ BPB 150 series product has four (4) cable gland entries. Only cable glands approved for Ex 'd' applications can be used, which must be suitable for the type of cable being used and also meet the requirements of the Ex 'd' flameproof installation standard EN 60079-14.

**SAFETY WARNING:** If the BCP/ BPB 150 is used at high ambient temperatures, i.e. over +40°C, then the cable entry temperature may exceed +70°C and therefore suitable heat resisting cable glands must be used, with a rated service temperature of at least 95°C.

If a high IP (Ingress Protection) rating is required, a suitable sealing washer must be fitted under the cable gland.

When only one cable entry is used, the other one must be closed with an Ex 'd' flameproof blanking plug, which must be suitably approved for the installation requirements.

## 9.0 END OF LINE MONITORING

An end of line monitoring diode or an end of line monitoring resistor can be connected across the 24V+ and 0 terminals. If an end of line monitoring resistor is used, it must have a maximum resistance value of 3k ohms and a minimum wattage of 0.5 Watts; or a minimum resistance value of 1.2k ohms and a maximum wattage of 2 Watts.

Scope: <b>EXcite</b> USER BCP 150 / BPB 150		MANUAL		<b>BARTEC TECHNOR</b>	
Date: 24.11.2014	Rev.: A	Checked by: T.H.	Approved by: EGT	Page: Page 6 of 6	Document no.: 55-DSP-5

## 10.0 MAINTENANCE

During working life of the product, little or no maintenance is required. GRP are resistant to most of the acids, alkalis and chemicals. If abnormal or unusual environmental conditions occur due to accident etc., visual inspection is recommended.

As to avoid electrostatic charge build-up, only exterior of the product can be cleaned with a damp cloth. If spare parts are required, these can be supplied by BARTEC TECHNOR Company.

**SAFETY WARNING:** In the case of Anti-Static and UV Resistant GPR, the painting of the enclosure surface has been processed specially. To maintain the product to be Anti-Static, extra normal painting is not allowed.

If any failure occurs but not cause by human factor, the product can be returned to BARTEC TECHNOR for free repair or replacement during warranty period.

## 11.0 CONDITIONS FOR SAFETY USE

- i. This apparatus is suitable to be used only in ambient temperature as stated below:
- ii. Other than product manufacturer, painting and surface finishing are not permitted by the third party.
- iii. When used in dusty atmosphere, flameproof cable entry devices or stopping plugs have to be selected and installed carefully in order to maintain the IP rating (IP66/67) of the product.

Type	Ambient Temp.
BCP / BCP-150	-40° to +70°C