

Messages in MAK 3002 - system

Messages are displayed in plain text. They serve to inform you about:

- Operating states or changes to the operating regime,
- Failure to observe the configured limits,
- Errors and faults during operation.

Messages are headed „Information“, „Warning“ or „Interruption“, depending on their contents.

Messages usually have to be confirmed. Only then will the program continue.

In the case of messages which draw attention to a fault or an error, you should rectify the cause.

The device which originated the fault can be deactivated temporarily in order to continue the tour.

With the Button F2 a Printout of the shown error message can be created.

suppl cd. 142	
quantity 17.00ℓ	
temperat. ----°C	
Te.-Sens.1	Abort
No Response:0 10	OK

suppl cd. 123451	
quantity 1081.7ℓ	
temperat. 20.7°C	
samp. qty 42.0ml	
INTERRUPTION	OK
Ultras. 1	
filling lvl reached	
2f 1	

suppl cd. 111	
quantity 22ℓ	
temperat. 26.0°C	
WARNING	Abort
upper temperature	
limit reached	
26 °C	OK