



Initiate the Events screen



The system offers hidden EVENTS screen. Press any left soft key, the EVENTS function become visible and should be pressed within 3 seconds to activate, else it will disappear again.

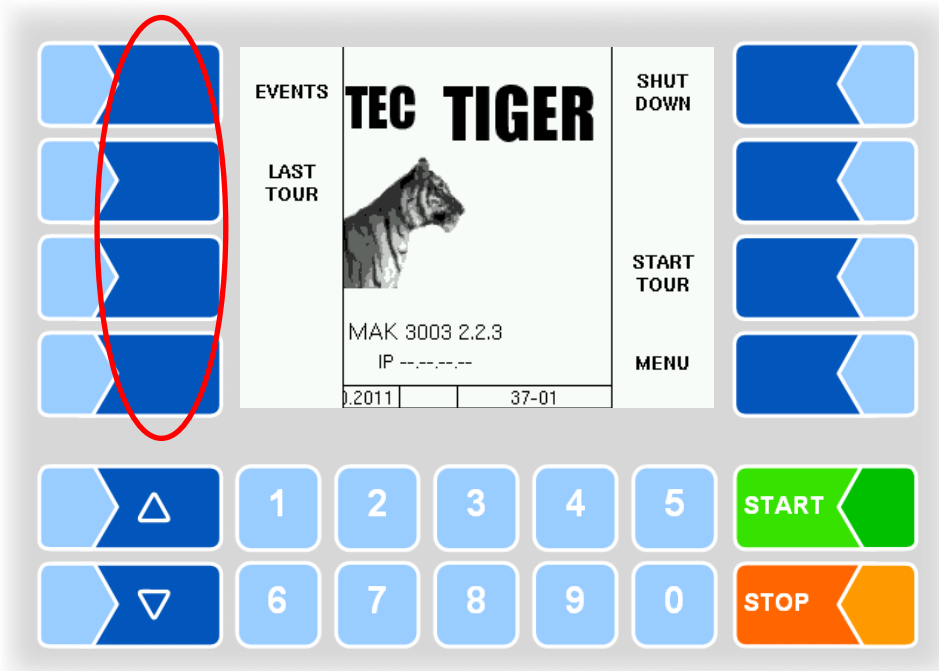

Here you see the EVENTS screen with two active alarms. Active alarms are indicated by an Exclamation-mark underneath the „A“. Alarms are displayed, even if they have been confirmed, until the root cause is fixed. In the down-right corner you can see a code. The code is for unambiguous identification of each event/fault.

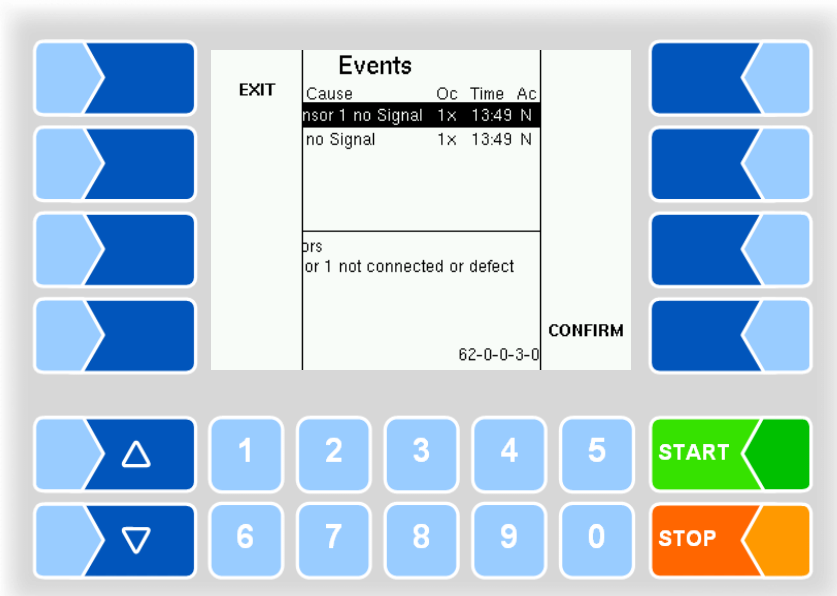

To leave the EVENTS screen, you must activate the hidden EXIT function by pressing any left soft key. The EXIT function becomes visible and should be pressed within 3 seconds to activate.