


Resistive coupling element

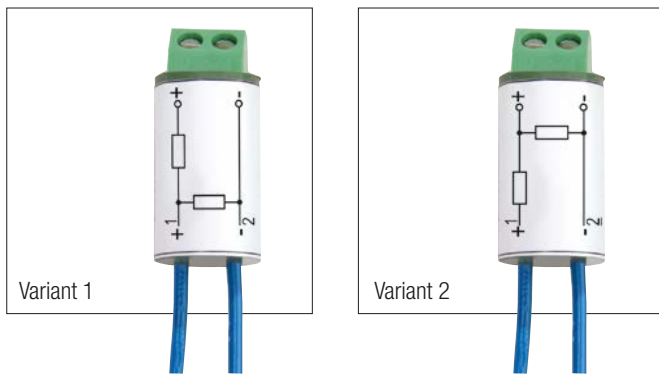

The resistive coupling element is used to monitor open and short circuits in isolator amplifier circuits controlled by mechanical contacts. The coupling element is installed directly to the control contact or inside its terminal box.

Function

Numerous isolator amplifiers can monitor the connected sensor line for open or short circuit conditions thanks to the employment of electronic proximity switches to which current can be applied in both damped and undamped status (DIN EN 60947-5-6). Current values outside the specified range are identified as open or short circuits. If simple mechanical contacts are used, it is not possible to identify a short circuit.






Neither can be distinguished between open circuit and open contact. This problem can be solved by installing a resistor combination at the end of the sensor line immediately before the switch. This combination provides a closed-circuit current even when the contacts is open. At closed contact it restricts the current to a value which lies clearly below the response threshold for short circuit.

Four states can be detected: open circuit (broken cable), open switch, closed switch, short circuit

The resistive coupling element can be used with all isolator amplifiers featuring open and short circuit monitoring, e. g. BARTEC, CEAG, Hartmann & Braun, Pepperl + Fuchs

Technical data

Resistance	see ordering information
Terminals	1.5 mm ²
Connection cable	0.75 mm ²
Max. Power	2.4 W at T5
Ambient temperature	-40 °C to +60 °C

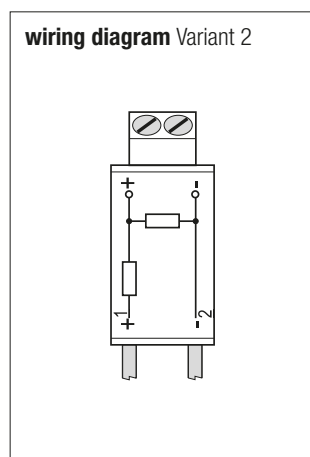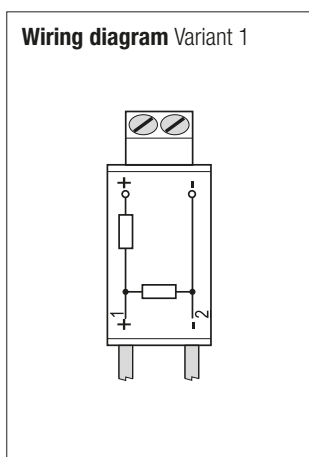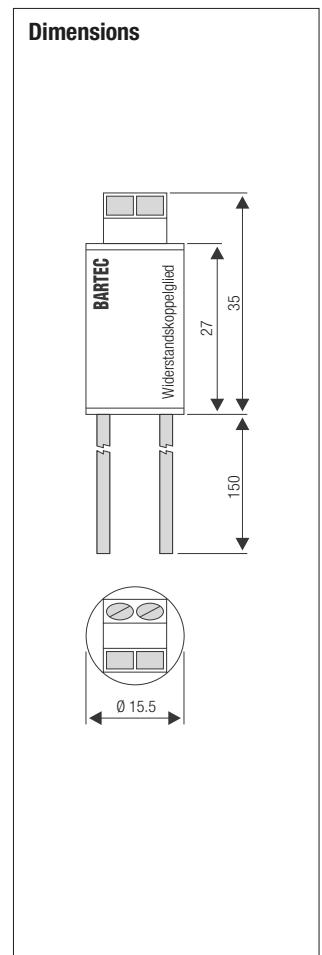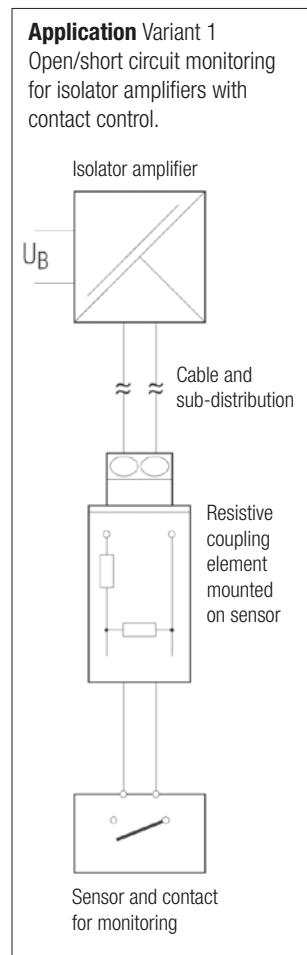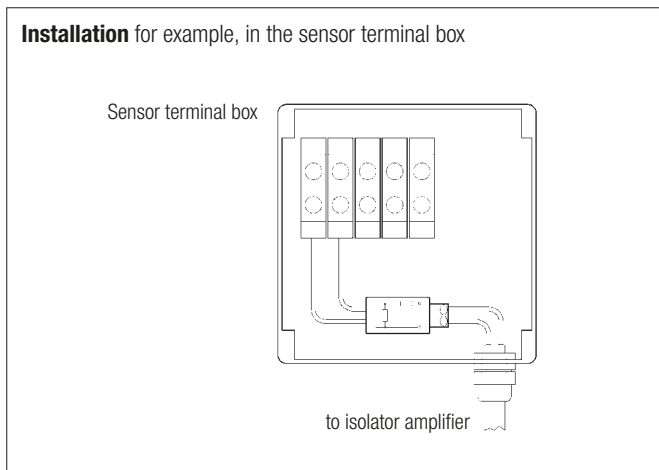

Resistive coupling element

Ordering information

Variant	Description				Order no.
2	1 k/10 k	with terminals and single core cables	10 k	parallel to the terminal	17-9Z62-0001
1	1 k/10 k	with terminals and single core cables	10 k	parallel to the single core cable	17-9Z62-0002
1	1.5 k/10 k	with terminals and single core cables	10 k	parallel to the single core cable	17-9Z62-0003
1	680 k/22 k	with terminals and single core cables	22 k	parallel to the single core cable	17-9Z62-0004
1	1.2 k/15 k	with terminals and single core cables	15 k	parallel to the single core cable	17-9Z62-0005
1	680 R/22 k	with terminals and single core cables	22 k	parallel to the single core cable	17-9Z62-0006
1	1 k/12 k	with terminals and single core cables	12 k	parallel to the single core cable	17-9Z62-0007
1	1 k/15 k	with terminals and single core cables	15 k	parallel to the single core cable	17-9Z62-0008
1	2.2 k/3.3 k	with terminals and single core cables	3 k3	parallel to the single core cable	17-9Z62-0010
1	1 k/22 k	with terminals and single core cables	22 k	parallel to the single core cable	17-9Z62-0012
1	2.1 k/22 k	with terminals and single core cables	22 k	parallel to the single core cable	17-9Z62-0013
1	1 k 4/10 k	with terminals and single core cables	10 k	parallel to the single core cable	17-9Z62-0015
1	1 k/2 k	with terminals and single core cables	2 k	parallel to the single core cable	17-9Z62-0016
1	1 k 5/8 k 25	with terminals and single core cables	8 k 25	parallel to the single core cable	17-9Z62-0017
1	1 k/10 k	with terminals and single core cables	10 k	parallel to the single core cable + wire end ferrules	17-9Z62-0021
1	1.5 k/10 k	with terminals and single core cables	10 k	parallel to the single core cable + wire end ferrules	17-9Z62-0022
1	2.7 k/10 k	with terminals and single core cables	10 k	parallel to the single core cable	17-9Z62-0023
1	680 R/2 k 7	with terminals and single core cables	2 k 7	parallel to the single core cable	17-9Z62-0027
1	100 R/1 k 1	with terminals and single core cables	100 R	parallel to the single core cable	17-9Z62-0028
1	100 R/0 k	with terminals and single core cables	100 R	parallel to the single core cable	17-9Z62-0029

Technical data subject to change without notice.