


Scope: <b>EXcite</b> USER MANUAL BHB 125 / BHB 150			<b>BARTEC TECHNOR</b>		
Date: 24.11.2014	Rev.: A	Checked by: T.H.	Approved by: EGT	Page: Page 1 of 12	Document no.: 57-DSP-5

## TECHNICAL MANUAL

### EXPLOSION PROOF SOUNDER/ HORN & BEACON

#### BHB 125/ BHB 150

ATEX Marking:  II 2GD



Code: EPL Gb, Db

Ex d IIC T4/T5/T6 Gb

Ex tb IIIC TXXX°C



#### Marking Details:

			
CE 0470  II 2 GD	Presafe 14ATEX 5382X IECEX PRE 14.0045X		
Ex d IIC T6 Gb	IP66		
Ex tb IIIC T85°C			
T.amb; -40°C < Ta < +55°C			
	U	<input type="checkbox"/> VDC	<input type="checkbox"/> AC 50/60Hz
Serial NO.:			
WARNING - DO NOT OPEN WHEN AN EXPLOSIVE ATMOSPHERE IS PRESENT			
<b>BARTEC TECHNOR</b>			
STAVANGER NORWAY			

Alternative T class:

1;  
Ex d IIC T5 Gb  
Ex tb IIIC T100°C  
T.amb; -40°C < Ta < +60°C

2;  
Ex d IIC T4 Gb  
Ex tb IIIC T135°C  
T.amb; -40°C < Ta < +70°C

Please note that every care has been taken to ensure the accuracy of our technical manual. We do not, however, accept responsibility for damage, loss or expense resulting from any error or omission. We reserve the right to make alterations in line with technical advances and industry standards.

Scope: <b>EXcite</b> USER MANUAL BHB 125 / BHB 150			<b>BARTEC</b> <b>TECHNOR</b>		
Date: 24.11.2014	Rev.: A	Checked by: T.H.	Approved by: EGT	Page: Page 2 of 12	Document no.: 57-DSP-5

## 1.0 INTRODUCTION

BHB-125 / 150 series Explosion-proof sounder/horn & beacon are designed according to EN/IEC 60079-0, EN/IEC 60079-1 and EN/IEC 60079-31 standards. Enclosure material is Stainless Steel (BHB 125) or GRP (BHB 150). This product is certified for use and installation in Zone 1 and Zone 2 areas with gases groups of IIA, IIB, IIC and temperature classification of T4~T6. It specially applies to Oil & Gas, Offshore Platform, Chemical, Petrochemical, Refinery and Marine Industries etc. Users can choose from single or combination types. The design of 3 in 1 sounder, loudspeaker and beacon is unique. According to user control system, 4 stages of alarm tones can be sent out, from less critical stage (stage 1) to the most critical stage (stage 4). 64 tones are selectable. Tone can be preset during installation. At the same time, four stages of alarm light can also be sent out.

## 2.0 EXPLOSION PROOF LABELING

All products have a rating label which carries the following important information:

Product order no.: e.g.

**BHB125RX10DCARDN**

(Refer to the datasheet for product order selection)

Input voltage: up to 48V DC or 100-254V AC

Code: Ex d IIC Txx Gb

Ex tb IIIC Txx

ATEX Marking: Gas Group and Category: II 2GD

CE Mark: 

Warning: DO NOT OPEN WHEN AN EXPLOSIVE GAS ATMOSPHERE IS PRESENT

Note; exact information is given on the actual label, ref also example on page 1

## 3.0 TYPE APPROVAL STANDARD

The BHB 125/150 series have been approved to the following standards:

IEC/ EN 60079-0 General requirements

IEC/ EN 60079-1 Flameproof enclosure "d"

IEC/ EN 60079-31 Dust atmosphere "t"

Scope: <b>EXcite</b> USER MANUAL BHB 125 / BHB 150			<b>BARTEC</b> <b>TECHNOR</b>		
Date: 24.11.2014	Rev.: A	Checked by: T.H.	Approved by: EGT	Page: Page 3 of 12	Document no.: 57-DSP-5

## 4.0 ZONES, GAS GROUP, CATEGORY AND TEMPERATURE CLASSIFICATION

The BHB 125/ 150 series products have been certified Ex d IIC T4~T6. This means that the units can be installed in locations with the following conditions:

### Area Classification:

**Zone 1:** Explosive gas air mixture likely to occur in normal operation.

**Zone 2:** Explosive gas air mixture not likely to occur, and if it does, it will only exist for a short time.

**Gas Groupings:**  
 Group IIA Propane  
 Group IIB Ethylene  
 Group IIC Hydrogen and Acetylene

**Equipment Category:** ATEX 2GD

**EPL:** Gb / Db

**Temperature Range:** See label ref page 1

## 5.0 INSTALLATION

### General requirements

Selection, Installation, Maintenance and repair of electrical apparatus for use in potentially explosive atmosphere should be done in according to IEC/EN 6079-14 /-17 /-19. Product installation must be carried out in accordance with any local codes that may apply and should only be carried out by a competent electrical engineer.

### Location

The location of the unit should be made with due regard to the area which both the sounder and beacon warning signal must be audible and visible. The unit should only be fixed to services that can carry the weight of the unit.

Scope:

**EXcite**

USER MANUAL  
BHB 125 / BHB 150

**BARTEC TECHNOR**

Date:

24.11.2014

Rev.:

A

Checked by:

T.H.

Approved by:

EGT

Page:

Page 4 of 12

Document no.:

57-DSP-5

## Mounting

### SINGLE UNIT

The single unit only comes with one beacon and can be mounted via a 'U' shaped stainless steel bracket. It can be done using one 12mm diameter and two 8,5mm diameter bolt holes in the center of the bracket. (see fig 1). The alignment and positions can be adjusted by loosening the two M8 screws, which fastened the stainless steel bracket to the sounder. The sounder should be positioned such that dust, debris or water cannot enter into the horn opening.

### COMBINED UNIT

As for the combines unit it come with either one or two or three beacons and can be mounted on a vertical surface via a stainless steel mounting plate (see fig. 2 A/B/C/D). The fixing holes on the mounting plate are designed to fit M8 allen screw only. The diameter is 9mm. Use of stainless steel fastener is recommended by BARTEC TECHNOR.

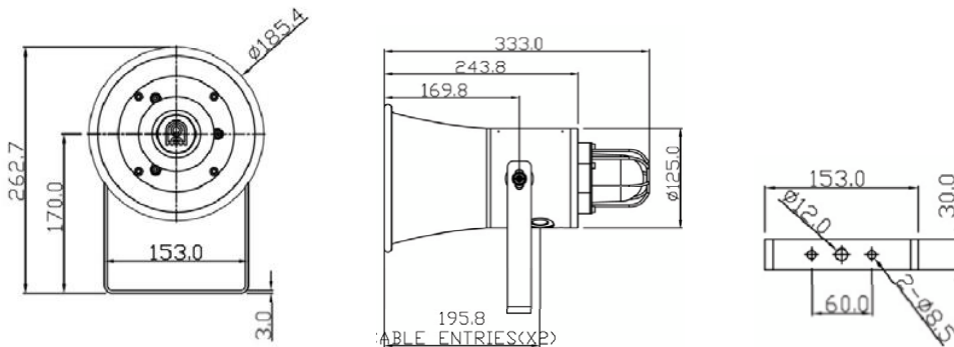


Fig. 1

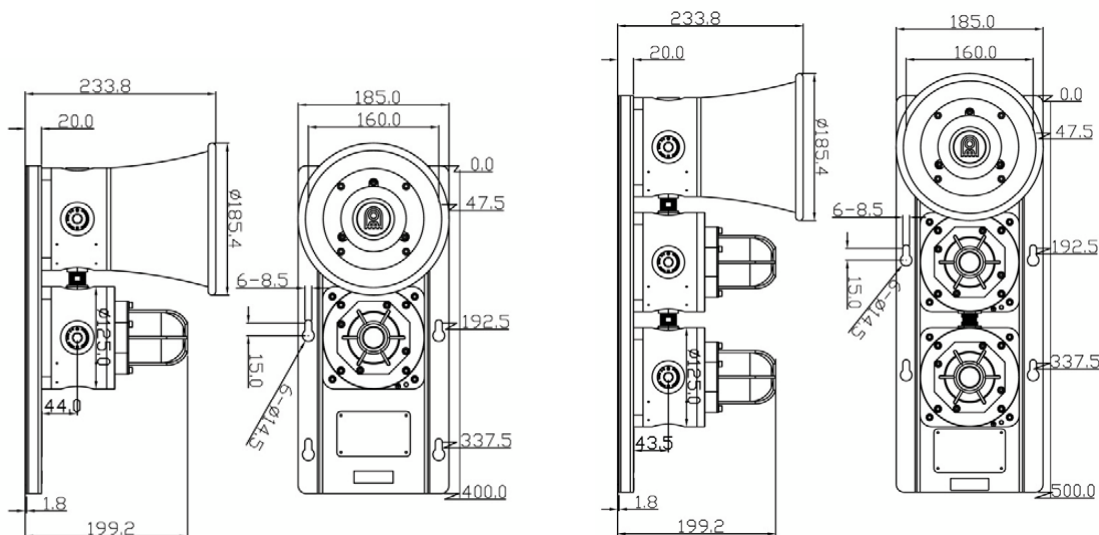


Fig. 2A

Fig. 2B

Scope:

**EXcite**

USER MANUAL  
BHB 125 / BHB 150

**BARTEC TECHNOR**

Date:

24.11.2014

Rev.:

A

Checked by:

T.H.

Approved by:

EGT

Page:

Page 5 of 12

Document no.:

57-DSP-5

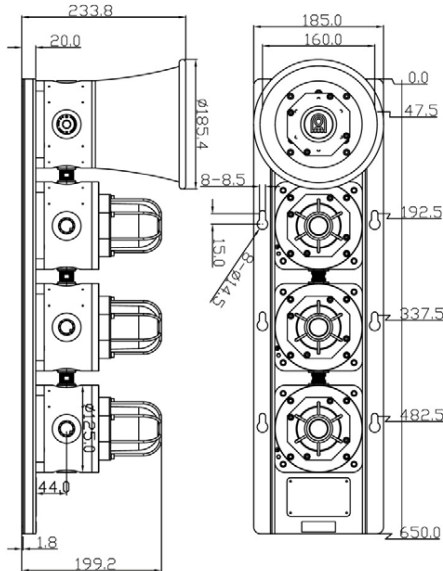


Fig. 2C

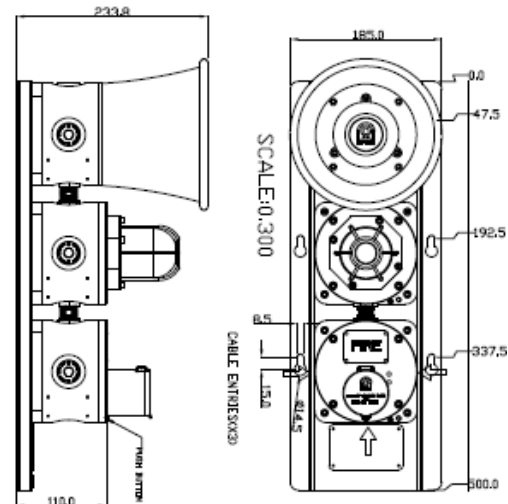


Fig. 2D

## 6.0 WIRING

### General requirement

BARTEC TECHNOR recommends that all cables and cores should be fully identified (suggest using cable from 2.0 to 2,5mm<sup>2</sup>)

Ensure that all nuts, bolts and screws are secured. Ensure that only the right and certified cable glands are used and earthen correctly. Ensure that only the right and certified stopping plugs are used to blank off unused gland entry points. In order to maintain the IP rating of the product, we recommend SS316L for this application

### Cable Connection

The cable connection is connected with the terminal blocks in the electronic PCB assembly located in the flameproof enclosure of the Beacon Component (for single unit, see fig. 3A), or assemble located in the bottom unit which can be Beacon Component (for combined unit, see fig. 3B) or Push Button or Junction Box. Cable connection should be carried out in accordance with relevant technical requirement.

Scope:

**EXcite**

USER MANUAL  
BHB 125 / BHB 150

**BARTEC** **TECHNOR**

Date:

24.11.2014

Rev.:

A

Checked by:

T.H.

Approved by:

EGT

Page:

Page 6 of 12

Document no.:

57-DSP-5

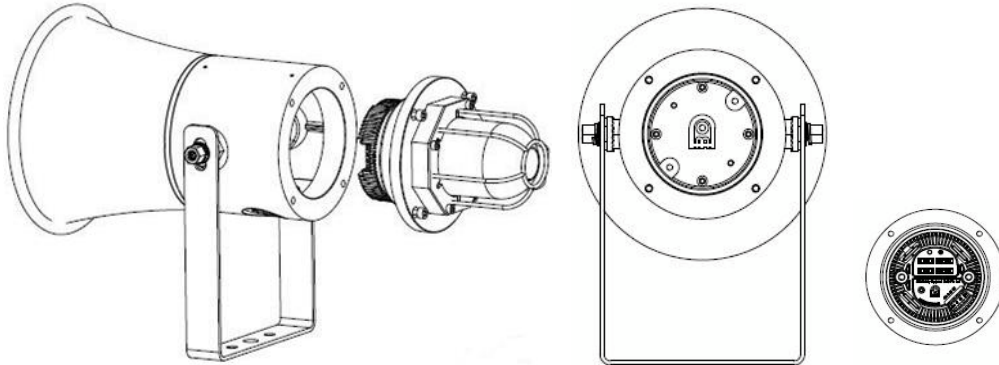


Fig. 3A – Single Unit

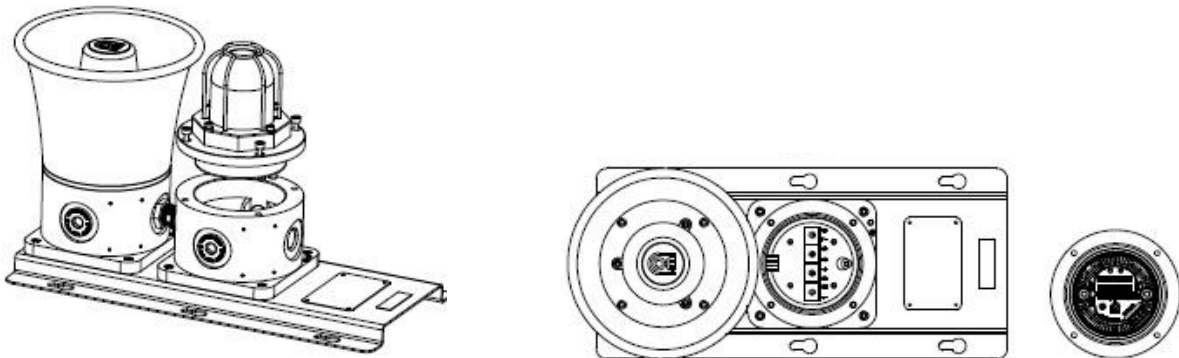


Fig. 3B – Combined Unit

#### Remove End Cover (Beacon Component)

Unscrew the 4 (BHB 125) or 6 (BHB 150) M5 retained hex socket head screws of the Beacon Component (See fig. 3A/B). This will release the cover from the base and allow the cover to hang on the retaining wire strap. Before replacing the cover, check that the flameproof joints are clean and not damaged, the gasket is still retained in its groove.

**CAUTION:** Before removing the cover, ensure the power to the product is isolated. Remove the four pieces of M5 socket screws to open the cover. Twist the cover gently clockwise and anti-clockwise, whilst pulling away from the base until it comes off. Replace the cover in similar way, but operate in reverse manner as above.

Scope:

**EXcite**

USER MANUAL  
BHB 125 / BHB 150

**BARTEC** **TECHNOR**

Date:

24.11.2014

Rev.:

A

Checked by:

T.H.

Approved by:

EGT

Page:

Page 7 of 12

Document no.:

57-DSP-5

## Power Supply

Up to 48v DC

### PCB WIRING TERMINALS SINGLE UNIT ( DC )

**LED Type:** (See Fig 4)

0: Power input DC 0/COM

+24V: Power input DC 24V +

S1: Switch 1 for alarm stage selection

S2: Switch 2 for alarm stage selection

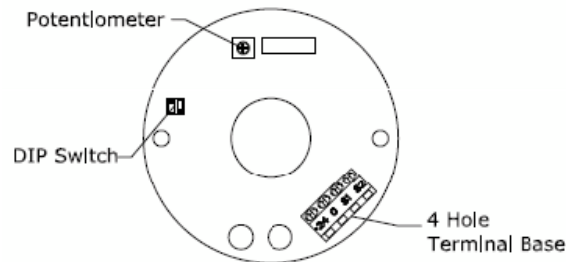


Fig. 4

**Xenon Type:** (see Fig. 5)

0: Power input DC 0/COM

+24V: Power input DC 24V +

S1: Switch 1 for alarm stage selection

S2: Switch 2 for alarm stage selection

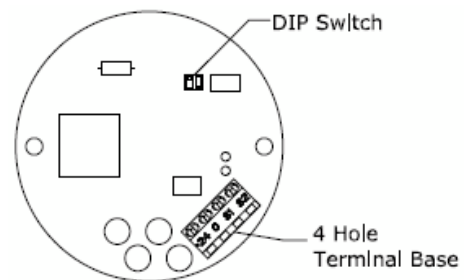


Fig. 5

**Sounder:** (see Fig. 6)

0: Power input DC 0/COM

+24V: Power input DC 24V +

S1: Switch 1 for alarm stage selection

S2: Switch 2 for alarm stage selection

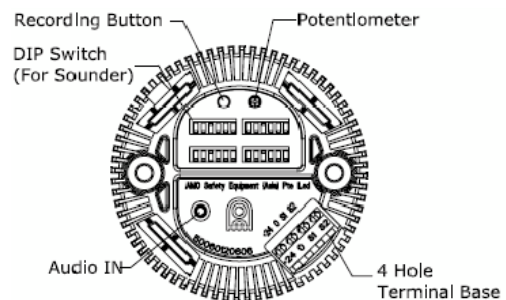


Fig. 6

Scope: <b>EXcite</b> USER MANUAL BHB 125 / BHB 150			<b>BARTEC TECHNOR</b>		
Date: 24.11.2014	Rev.: A	Checked by: T.H.	Approved by: EGT	Page: Page 8 of 12	Document no.: 57-DSP-5

## COMBINED UNIT (24V DC)

### LED type:

As same as above LED type in Single Unit (See fig. 4)

### Xenon Type: (see Fig. 7)

0: Power input DC 0/COM

+24V: Power input DC 24V +

S1: Switch 1 for alarm stage selection

S2: Switch 2 for alarm stage selection

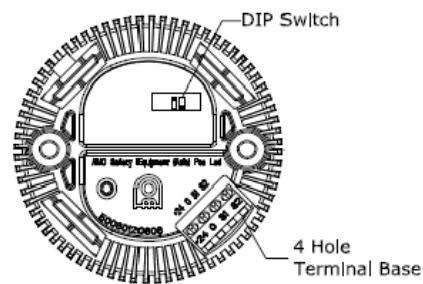


Fig. 7

### Sounder: (see Fig. 6)

As same as above LED type in Single Unit (See fig. 6)

### Four Alarm Stages

DC Type:

Stage 1: apply power supply to 0/COM and +24V;

Stage 2: apply power supply to 0/COM, +24V and connect S1 to 0/COM;

Stage 3: apply power supply to 0/COM, +24V and connect S2 to 0/COM;

Stage 4: apply power supply to 0/COM, +24V and connect S1, S2 to 0/COM.

## 7.0 TONE SELECTION

The sounder of BHB provides 64 tones to be selected for the 1st stage alarm. Four stages of alarm tones can be preset via switch on the Sounder PCB.

### Tone Selection Switch

Use the four (4) DIP switches with 6 binary codes on the Sounder PCB to select tones (See Fig 6).

Tone Selection Table (see attached table 1)



Scope:

**EXcite**

USER MANUAL  
BHB 125 / BHB 150

**BARTEC TECHNOR**

Date: 24.11.2014	Rev.: A	Checked by: T.H.	Approved by: EGT	Page: Page 9 of 12	Document no.: 57-DSP-5
---------------------	------------	---------------------	---------------------	-----------------------	---------------------------

## 8.0 SOUNDER VOLUME CONTROL

The BHB has a volume control to adjust the output volume of the sounder component. To set the required output volume, adjust the potentiometer-VR1 on the PCB (See Fig 6). The potentiometer should be set to fully clockwise position if maximum output volume is needed.

## 9.0 STATUS CHOSEN AND FLASHING FREQUENCY ADJUSTMENT

### LED Beacon

The **LED Beacon** provides flashing and rotary status to be selected.

Use **DIP Switch** with 2 binary codes on the **LED Beacon PCB** to select flashing or rotary status (including steady status). Adjust the **Potentiometer** on the **LED Beacon PCB** (see fig. 4) for frequency adjustment. For fastest stage frequency, the potentiometer should be set to fully clockwise position.

### LED Status Selection Switch

DIP Switch: ON = 1, OFF = 0

S1/S2: ON = Connect with 0/COM

OFF = Disconnect with 0/COM

S1/S2		S1=OFF S2=OFF	S1=ON S2=OFF	S1=OFF S2=ON	S1=ON S2=ON
1 <sup>st</sup> DIP	2 <sup>nd</sup> DIP	Alarm stage 1	Alarm stage 2	Alarm stage 3	Alarm stage 4
0	0	Steady light	Slow flash 45-80 times/min	Medium flash 60-95 times/min	Fast flash 75-110 times/min
0	1	Slow flash 45-80 times/min	Medium flash 60-95 times/min	Fast flash 75-110 times/min	Steady light
1	0	Steady light	Slow rotary 45-80 times/min	Slow rotary 60-95 times/min	Slow rotary 75-110 times/min
1	1	Slow rotary 45-80 times/min	Slow rotary 60-95 times/min	Slow rotary 75-110 times/min	Steady light

Scope:

**EXcite**

USER MANUAL  
BHB 125 / BHB 150

**BARTEC** **TECHNOR**

Date:

24.11.2014

Rev.:

A

Checked by:

T.H.

Approved by:

EGT

Page:

Page 10 of 12

Document no.:

57-DSP-5

## Xenon Beacon

The **Xenon Beacon** provides flashing status.

Use **DIP Switch** with 2 binary codes on the Xenon **Beacon PCB** (see fig. 5/7) for frequency adjustment.

Xenon Beacon Flashing Frequency Adjustment

DIP Switch: ON = 1, OFF = 0

S1/S2: ON = Connect with COM

OFF = Disconnect with COM

S1/S2 DIP Switch		S1=OFF	S1=ON	S1=OFF	S1=ON
		S2=OFF	S2=OFF	S2=ON	S2=ON
1	1	Alarm stage 1	Alarm stage 2	Alarm stage 3	Alarm stage 4
0	0	45 times/min	60 times/min	75 times/min	120 times/min
0	1	80 times/min	100 times/min	120 times/min	150 times/min
1	0	90 times/min	120 times/min	150 times/min	150 times/min

## 10.0 CABLE GLAND

The BHB series product has cable gland entries. Only cable glands approved for Ex 'd' applications can be used, which must be suitable for the type of cable being used and also meet the requirements of the Ex 'd' flameproof installation standard EN 60079-14.

**SAFETY WARNING:** If the BHB is used at high ambient temperatures, i.e. over +40°C, then the cable entry temperature may exceed +70°C and therefore suitable heat resisting cable glands must be used, with a rated service temperature of at least 95°C.

If a high IP (Ingress Protection) rating is required, a suitable sealing washer must be fitted under the cable gland.

When only one cable entry is used, the other one must be closed with an Ex 'd' flameproof blanking plug, which must be suitably approved for the installation requirements.

Scope: <b>EXcite</b> USER MANUAL BHB 125 / BHB 150			<b>BARTEC</b> <b>TECHNOR</b>		
Date:	Rev.:	Checked by:	Approved by:	Page:	Document no.:
24.11.2014	A	T.H.	EGT	Page 11 of 12	57-DSP-5

## 11.0 END OF LINE MONITORING

An end of line monitoring diode or an end of line monitoring resistor can be connected across the 24V+ and 0 terminals. If an end of line monitoring resistor is used, it must have a maximum resistance value of 3k ohms and a minimum wattage of 0.5 Watts; or a minimum resistance value of 1.2k ohms and a maximum wattage of 2 Watts.

## 12.0 MAINTENANCE

During working life of the product, little or no maintenance is required. SS316 is resistant to most of the acids, alkalis and chemicals.

If abnormal or unusual environmental conditions occur due to accident etc., visual inspection is recommended.

To avoid electrostatic charge build-up, only exterior of the product can be cleaned with a damp cloth.

If spare parts are required, these can be supplied by BARTEC TECHNOR Company.

If any failure occurs, but not caused by human factor, the product can be returned to BARTEC TECHNOR for free repair or replacement during warranty period.

## 13.0 CONDITIONS FOR SAFETY USE

- i. This apparatus is suitable to be used only in ambient temperature as stated on the label.
- ii. Other than product manufacturer, painting and surface finishing are not permitted by the third party.
- iii. When used in dusty atmosphere, flameproof cable entry devices or stopping plugs have to be selected and installed carefully in order to maintain the IP rating (IP66/67) of the product.

Scope:

**EXcite**USER MANUAL  
BHB 125 / BHB 150**BARTEC TECHNOR**

Date:

24.11.2014

Rev.:

A

Checked by:

T.H.

Approved by:

EGT

Page:

Page 12 of 12

Document no.:

57-DSP-5

**Table 1: Tone selection table**

ITEM	DESCRIPTION				Max dB	SW1,SW2,SW3,SW4
Tone	Frequency	Tone Description	Tone Application	Waveform	(DB)@1M	Bit 123456
01	300Hz	Continuous			112	000000
02	340Hz	Continuous			112	100000
03	440Hz	Continuous			112	010000
04	554Hz	Continuous			113	110000
05	660Hz	Continuous	All-clear, Sweden		111	001000
06	800Hz	Continuous			113	101000
07	1000Hz	Continuous	PFEER Toxic Gas		117	011000
08	1200Hz	Continuous			114	111000
09	2000Hz	Continuous			113	000100
10	2400Hz	Continuous			111	100100
11	2850Hz	Continuous			112	010100
12	420Hz@0.625 sec	intermittent	Australian, AS2220		107	110100
13	544Hz@0.875 sec	intermittent			112	001100
14	660Hz@150ms on,150ms off	intermittent	Swedish Fire Alarm		108	101100
15	660Hz@1.8sec on,1.8sec off	intermittent	Swedish Fire Alarm		112	011100
16	745Hz@500ms on,500ms off	intermittent			110	111100
17	800Hz@250ms on,250ms off	intermittent			110	000010
18	800Hz@250ms on,1sec off	intermittent			108	100010
19	1000Hz@250ms on,250ms off	intermittent			113	010010
20	1000Hz@500ms on,500ms off	intermittent	Back-up Alarm(LF)		113	110010
21	1000Hz@250ms on,1sec off	intermittent			113	001010
22	1000Hz@1sec on,1sec off	intermittent	PFEER Gen, Alarm		113	101010
23	2400Hz@250ms on,250ms off	intermittent			109	011010
24	2400Hz@500ms on,500ms off	intermittent			108	111010
25	2850Hz@1sec on,1sec off	intermittent	Back-up Alarm(HF)		109	000110
26	2850Hz@150ms on,100ms off	intermittent	Pelican Crossing		109	100110
27	970Hz@0.5sec on/0.5sec off,1.5sec off	3 Pulses			113	010110
28	2850Hz@0.5sec on/0.5sec off,1.5sec off	3 Pulses			109	110110
29	700Hz@6sec on/12sec off	intermittent	Pre-vital mess, Sweden		113	001110
30	700Hz@2sec on/2sec off	intermittent	Air-raid, Sweden		113	101110
31	700Hz@125ms on/125ms off	intermittent	Local warning, Sweden		113	011110
32	720Hz@0.7sec on/0.3sec off	intermittent	Industrial alarm, Germany		113	111110
33	544Hz/440Hz@500ms	Alternating	Swedish Fire Alarm		109	000001
34	544Hz/440Hz@100ms/400ms	Alternating	AFNOR,NFS 32-001		109	100001
35	544Hz/440Hz@1sec	Alternating	Turn-out, Sweden		108	010001
36	800Hz/1000Hz@125ms	Alternating	Increased Urgency		112	110001
37	2400Hz/2900Hz@125ms	Alternating	Security Deterrent		108	001001
38	800Hz/1000Hz@250ms	Alternating	Fire Alarms		112	101001
39	800Hz/1000Hz@580ms	Alternating			112	011001
40	1000Hz/2000Hz@500ms	Alternating			112	111001
41	2400Hz/2900Hz@250ms	Alternating	Security Alarms		108	000101
42	500Hz-1000Hz@6Hz	Fast whoop			111	100101
43	500Hz-1200Hz@0.3Hz	Sweeping			110	010101
44	660Hz-1200Hz@1Hz	Sweeping			109	110101
45	800Hz-1000Hz@1Hz	Med Sweeping(LF)			109	001101
46	800Hz-1000Hz@7Hz	Fast Sweeping(LF)			109	101101
47	2400Hz-2900Hz@1Hz	Sweeping			108	011101
48	2400Hz-2900Hz@7Hz	Fast Sweeping			108	111101
49	800Hz-1000Hz@50Hz	Low Freq Buzz	Buzz		108	000011
50	2400Hz-2900Hz@50Hz	High Freq Buzz	Buzz		108	100011
51	500Hz-1200Hz@2.5sec  0.5sec	Slow Whoop			110	010011
52	500Hz-1200Hz@4.25sec , 0.25sec	Slow Whoop	Evacuation,Netherlands,Australian		110	110011
53	1200Hz-500Hz@1Hz	Reverse sweeping	Prepare to Abandon Platform		110	001011
54	1400Hz-1600Hz@1sec , 0.5sec	sweeping	NFC 48-256		110	101011
55	2850Hz	Fast Shake	Bell		106	011011
56	800Hz/660Hz	Tow tone chime	Int'l evacuation alarm		110	111011
57	800Hz/1000Hz	ISO 8201 Evacuation	Int'l evacuation alarm		110	000111
58	250Hz-1200Hz	Motor Siren-slow rise			112	100111
59	250Hz-800Hz	Motor Siren-slow rise			113	010111
60	250Hz-2400Hz	Motor Siren-slow rise	Industrial alarm, Germany		108	110111
61	Client Spare recording	20 or 10 Sec				001111
62	Client Spare recording	20 or 15 Sec				101111
63	Client Spare recording	20 or 25 Sec				011111
64	Client Spare recording	20 or 30 Sec				111111